User Manual (en)

IP Telephone

tiptel 3010

tiptel

Table of Content

Table of Content 3
Safety notes 6
Getting Started 7
Packing List 7
Phone Installation 10
1. Attach the Foot stand 10
2. Connect the Handset and optional Headset 10
3. Connect the Network and Power 11
Initialization 11
Getting Familiar with Your Phone 13
Hardware Components Preview 13
Icon Preview 16
Memory Key Function Overview 17
Basic Features Configuration 19
Web Login 19
Administrator Password 20
Language 21
Time and Date 22
Screen Saver 25
Ring Tone 26
Volume 28
Directory 29
Basic Call Features 32
Place a Call 32
End a Call 33
Receive a Call 33
Auto Answer 34

Call Hold 35
Call Transfer 36
Call Conference 38
Call Forward 39
Call Return 42
Anonymous Call 43
Reject Anonymous 43
Call Mute 44
DND 45
Key as Send 45
No Key Entry Timeout 46
Keypad Lock 46
Hot Line 47
Advanced Features 49
Voice Message 49
Intercom 49
Speed Dial 50
Direct Pickup 51
Group Pickup 52
BLF 52
Shared Line 54
Record 55
Call Park 56
Paging 57
DTMF 57
Prefix 58
Factory Reset 59

Appendix 60
Warranty 60
Guarantee 60
Declaration of conformity 60
Disposal 60

Safety notes

- You may not set-up and use this device in the following surroundings:
  - Outdoors
  - In damp or wet spaces (bath, shower, swimming pool, etc.)
  - In hazardous environments
  - In locations exposed to direct sunlight
  - At ambient temperatures below 0 °C or above 40 °C
  - In case of strong vibrations or shocks
  - In dusty environments
- Only use a soft, damp cloth to clean the device. Do not use chemicals or abrasive cleaners.
- During a thunder storm you should neither phone nor connect or disconnect any lines (electrical shock hazard in case of a lightning strike)
- Opening the device and conducting improper repairs may hazard the user.
- Disposal of this device must be carried out according to local regulations.
- Please note that in case of mains outage emergency calls cannot be placed.
- Only such devices may be connected to the phone, which deliver safety extra low voltage (SELV).
- Only headsets with integrated volume limiter for hearing protection according to EN 60950 may be used.
- Make sure that the connecting lines are installed carefully so that no one can trip over the cable. Connected cables must not be bent excessively or subjected to mechanical strain.
- Connecting cables must be wired inside buildings only (Danger of electrical shock due to transients).
- In case of malfunctions disconnect power cord and all communication lines.
- Before opening the device, unplug any communication lines.
- In case of operating the device with external AC adapter:
- Only the original AC adapter (Article-No. 3054051) may be used (Danger of electrical shock and/or fire)
- The AC adapter must be easily accessible so that it can be removed from the wall outlet any time in case of danger.

- In case of malfunction remove the AC adapter from the wall outlet and disconnect any communication lines.
- Before opening the device remove the AC adapter from the wall outlet and disconnect any communication lines.
- The device, AC adapter (inclusive, has been developed and manufactured in compliance with Standard EN 60950 "Safety of information technology equipment".
- Any changes or modifications not expressly approved by the manufacturer can void the user's authority to operate the equipment.

Getting Started

Packing List

The package contains the following parts, please check if all the items are not missed:

1. The phone device

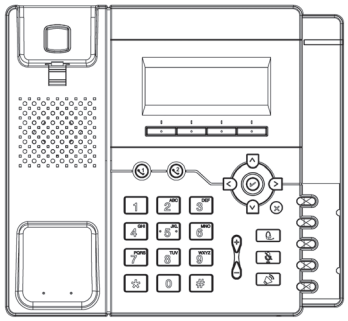

2. The footstand

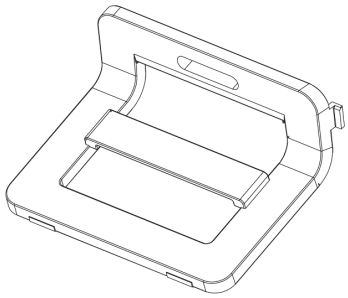

3. Handset

4. Headset cord

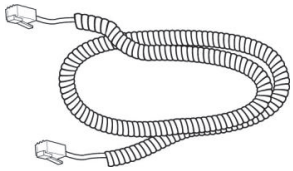

5. Power adapter (optional)

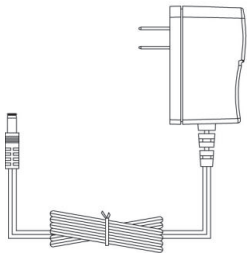

6. Ethernet cable

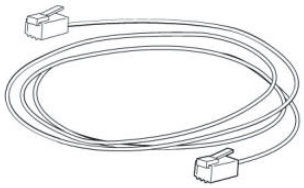

7. Quick installation reference

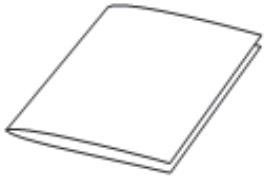

Phone Installation

1. Attach the Foot stand

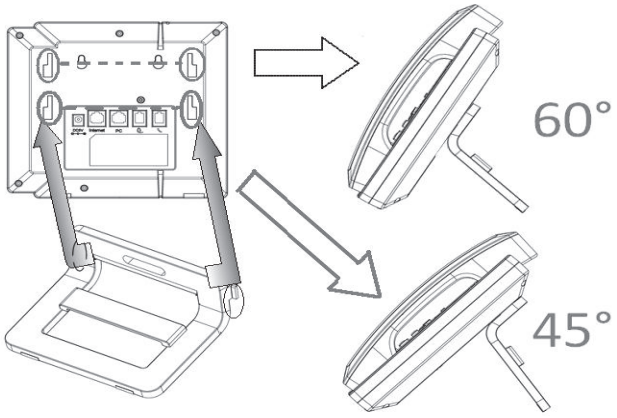

2. Connect the Handset and optional Headset

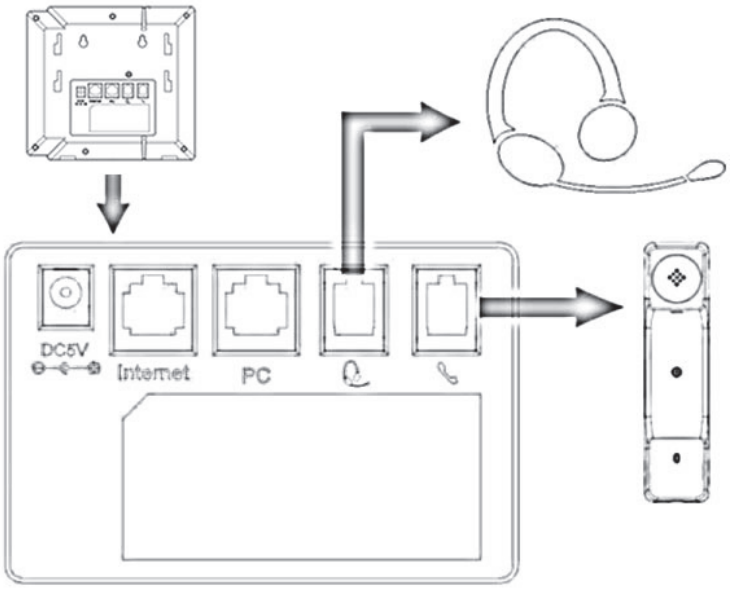

3. Connect the Network and Power

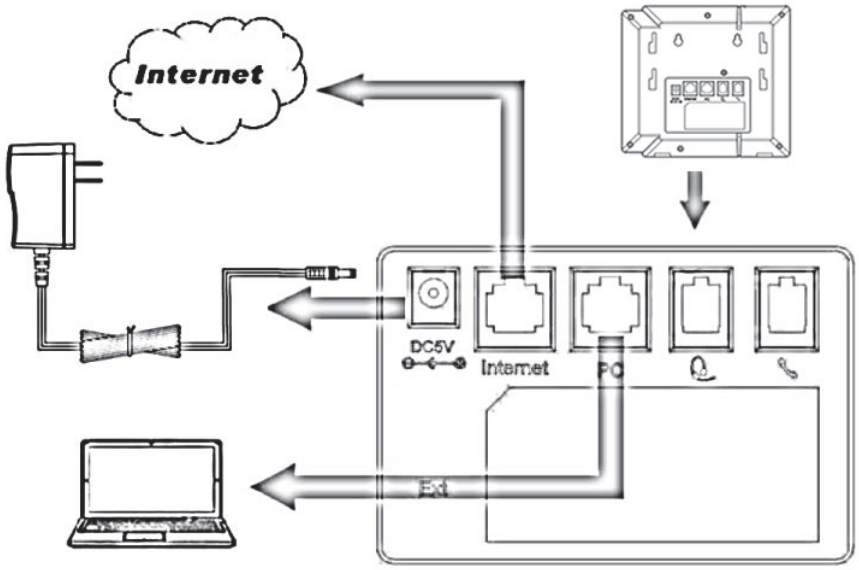

Initialization

After your phone has been powered up, the system boots up and performs the following steps:

Automatic Phone Initialization

The phone finishes the initialization process by loading the saved configuration. The phone LCD screen will display "Booting"

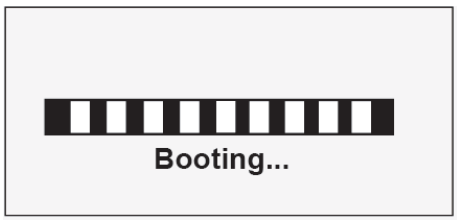

And then show “Initializing “during the initialization.

By default the phone attempts to contact a DHCP server in your network in order to obtain its valid network settings, e.g. IP address, subnet mask, default gateway, DNS server.

Getting Familiar with Your Phone

Hardware Components Preview

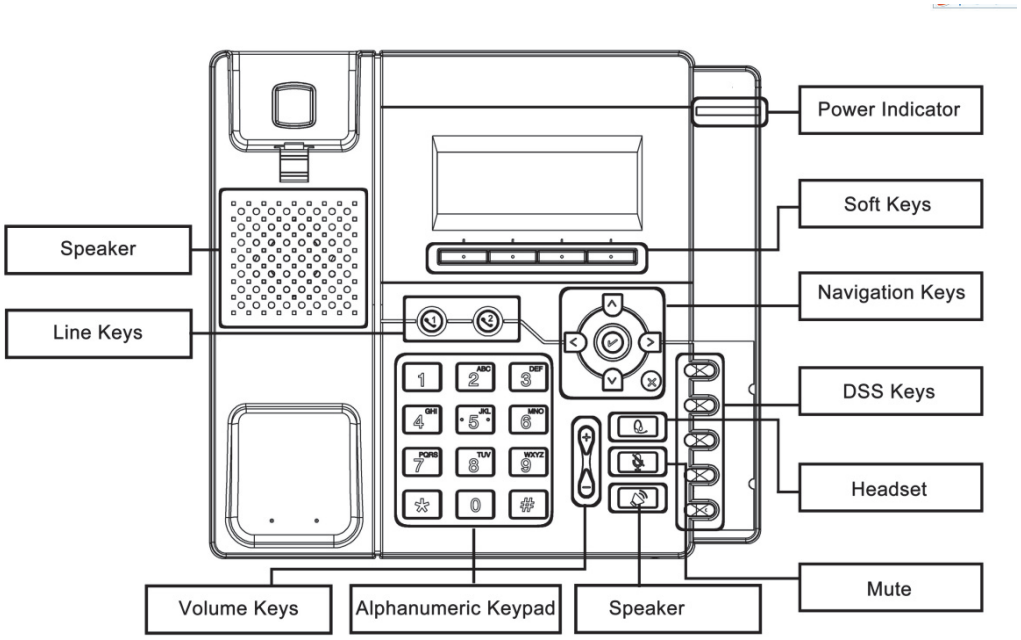

Item	Description
LCD screen	To Presentation all information about the date& time, accounts, soft keys, messages, calls and other some information.
Power Indicator LED	To indicate the power status
Line keys	The phone supported up to 4 accounts 1. Steady green: idle interface, during a call.. 2. Blink red: a call incoming
Soft keys	Labels automatically to identity their context-sensitive features.

Navigation keys	1. OK. **Up arrow key:** To move up of the selection shows on the screen. **Right arrow key:** To move right of the selection shows on the screen. **Left arrow key:** To move left of the selection shows on the screen. **Down arrow key:** To move down of the selection shows on the screen. 1. To return to idle screen. 2. To cancel the information or call on the screen.
Mute key	1. To mute the voice during the call (green light). 2. To un-mute the call.
Memory Keys	To be configured as different function as: 1. Line 2. Speed Dial 3. BLF 4. BLF List 5. Voice mail 6. Direct Pickup 7. Group Pickup 8. Call Park 9. Intercom 10. DTMF 11. Prefix

	12. Hold 13. Conference 14. DND 15. Redial 16. Transfer 17. SMS 18. Hot Desking 19. Call Return 20. Paging 21. Record 22. Shared Line The LED lights status when set as Shared line: Stay green: Idle Stay red: Busy Blinked green: Ring Back Blinked red: A call incoming Steady orange: During a call Blinked orange: Public Hold Blinked green: Private Hold Light Drown: Unregistered
Speaker	Press this button to place a call in hands-free mode.
Volume	To decrease the volume. To increase the volume.
Alphanumeric keypad	To enter the phone numbers, letters and so on.

Message		To indicator the New message, and press to read.
Headset		To indicate that the phone is or not in Headset mode.

Icon Preview

Icon	Description
	Network
	Registered succeed
	Unregistered
	Speakerphone mode
	Handset mode
	Headset mode
	Mute
	Forward
	Do Not Disturb
	Received calls
	Dialed Calls

	Missed calls
	Forward calls

Memory Key Function Overview

Line
Speed Dial
BLF
BLF List
Voice Mail
Direct Pick Up
Group Pick Up
Call Park
Intercom
DTMF
Prefix
Conference
Forward
Transfer

Hold
DND
Redial
Call Return
Record
URL Record
Paging
Group Listening
Public Hold
Private Hold
Shared Line
URL

Basic Features Configuration

This part will mainly introduce the basic configuration as the Time, Language, and Volume…

Web Login

1. Get the IP address: Press Menu →Status→ Information

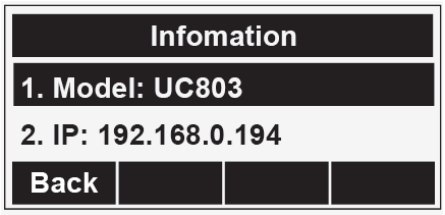

2. Input the IP Address in the web browser.
3. Input the user name (default is admin), password (default is admin).
4. Login successfully.

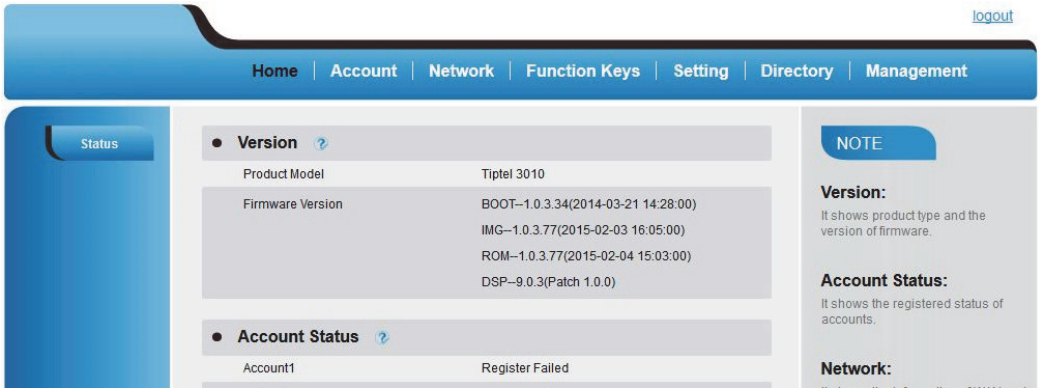

Note:

The PC and phone should be in the same segment.

When register the accounts in web and the server port is not "5060", then "SIP Server" should be set as "SIP Server's IP address: server port.", for example, "192.168.0.122: 5090".

Administrator Password

The password is mainly used for login the web interface or set the advanced settings through phone interface. And the default password of the administrator is: **admin**

To change to password via Phone Interface

1. Press Menu → setting → Advanced settings → password (default admin) → Phone Setting → Set Password
2. Enter the current PWD (password), new password and confirm the new password.
3. Press save soft key or to save the new password.

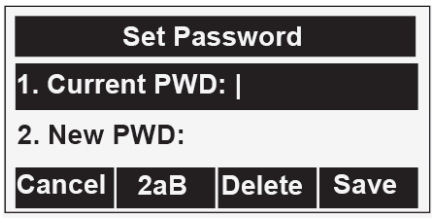

To change to password via Web Interface

1. Management → Password
2. Fill the value
3. Click  to save the configuration.

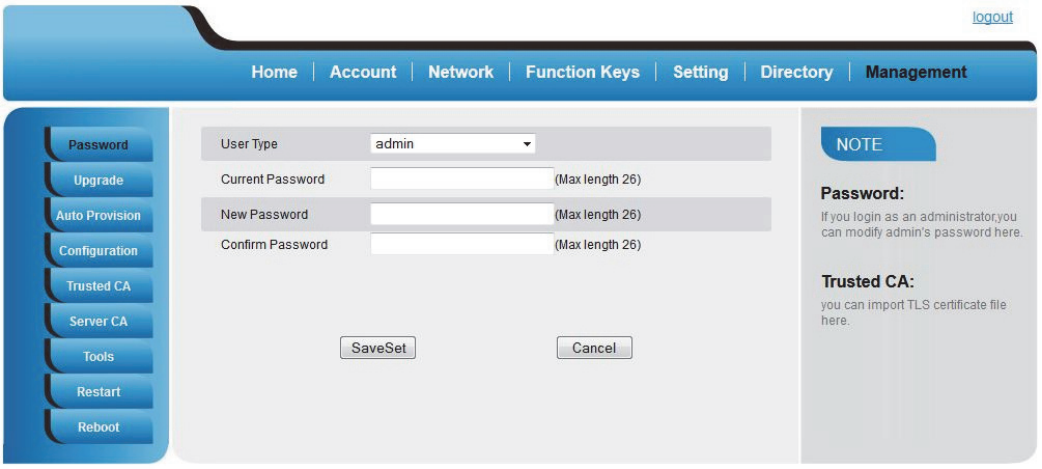

Note:

When you use the web interface: user name: admin password: admin(default)

Language

The default Phone interface language is English.

To change the language via Phone interface

1. Press Menu → Setting → Basic Settings → Language.
2. Press or Save soft key to save the configuration.

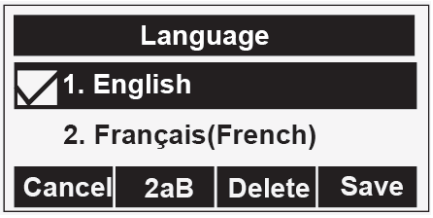

To change the language via Web Interface

1. Setting → Preference →Web Language
2. Select the necessary one.
3. Press to save the configuration.

Note:

All languages may not be available for selection. The available languages depend on the language packs currently loaded to the IP phone.

Time and Date

The time and date show on the idle page, and it can be set and change by SNTP server automatically or manual setting.

To configure the time and Date by SNTP setting

1. To press Menu → Setting → Basic setting → Time & Date → SNTP Settings
2. Press or , or Info soft key to change the Time zone.
3. Fill the NTP server1, NTP Server2, and Daylight Saving.
4. Press or Save soft key to save the configuration.

Note:

Press , all zone will show on the display, select the one you want and press save or confirm key to save the configuration.

To configure time and date manually

1. To press Menu → Setting → Basic setting → Time & Date → Manual Settings

2. Press and or change the right time, or you can input the right time.

3. Press or Save soft key to save the configuration.

To configure the Time & Date Format

1. To press Menu → Setting → Basic setting → Time & Date Format

2. Press and or press Info to change between 12 Hour or 24 Hour.

3. Press and or press Info to change among Y-M-D(year-month-day), M-D-Y(month-day-year), D-M-Y(day-month-year).

4. Press or Save soft key to save the configuration.

To configure the DHCP time

1. To press Menu → Setting → Basic setting → DHCP time

2. Press and or press Info to change between Disable and Enable.

3. Press or Save soft key to save the configuration.

To configure the Time and Date by web interface

1. Login
2. Login name: admin, password: admin (default)
3. Network → Advanced →NTP Server
4. Fill the value in the blank.

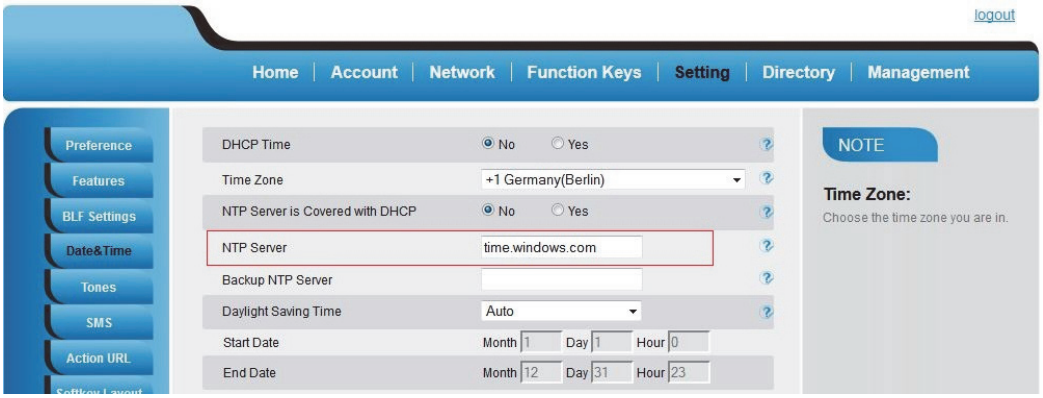

To change the Time Zone and Date Display Format via web interface

1. Setting → Preference →Time Zone
2. Select the necessary one.
3. Press SaveSet to save the configuration.

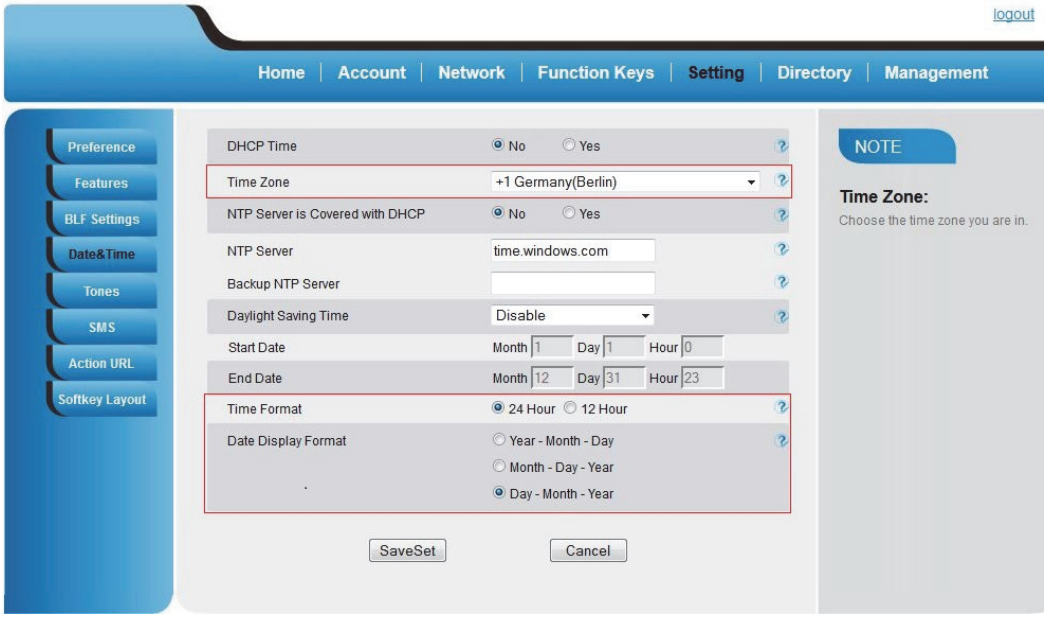

Note:

If the IP Phone cannot obtain the time and date from the Simple Network Time Protocol (SNTP) server, please contact your system administrator for more information.

Screen Saver

There are two types of screen saver:Backlight off, Time & Logo .

To enable screen saver via Phone

1. To press Menu → Display → Screensaver...
2. Press and or press Switch soft key to Choose the Time-out as 1 min or 2/5/10/30 minute.
3. Enter the Screensaver Type to choose one of the type: Backlight off, Time & Logo.
4. Press or Save soft key to save the selected configuration.

To disable screen saver via Phone

1. To press Menu → Display → Screensaver...
2. Press and or press Switch soft key to Choose the Time-out as off.
3. Press or Save soft key to save the selected configuration.

To Enable screen saver via Webpage

1. To Click Setting → Preference
2. To choose the Time-out as 1 min or 2/5/10/30 minute.
3. To select the screen Type as Backlight off or time & logo.
4. Click Saveset to save the configuration.

To Disable screen saver via Webpage

1. To Click Setting → Preference
2. To choose the Time-out as Off
3. Click Saveset to save the configuration.

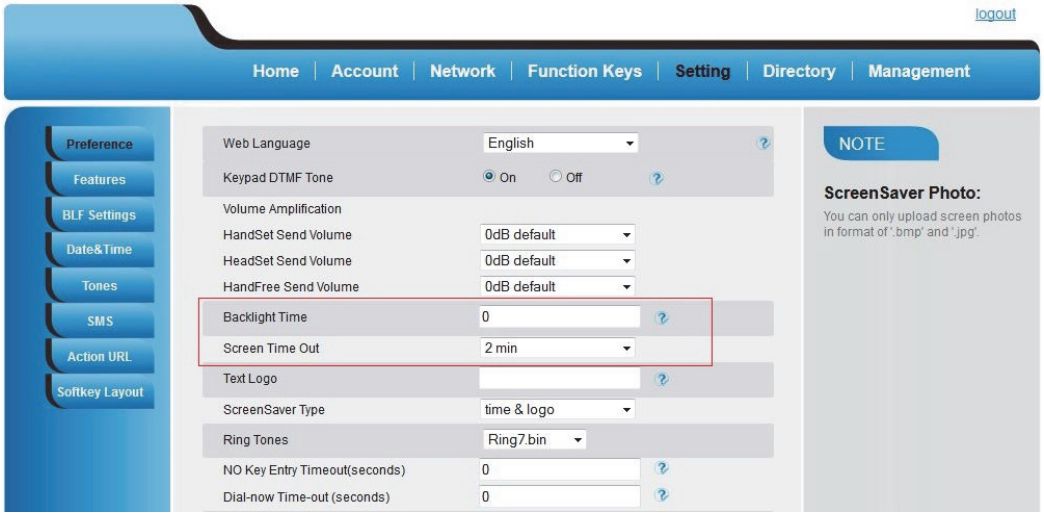

Ring Tone

You can adjust the type and volume of the ring tone.

To adjust the Ring Tone Type via Phone interface

1. Press Menu → Setting → Basic Settings → Ring Tone.
2. Press and to select the aimed one.
3. Press or Save soft key to save the configuration.

To adjust the Ring Tone Type via Web Interface

1. Account → Advanced → Account Ring Tone
2. Select the wanted one

3. Click SaveSet to save the configuration.

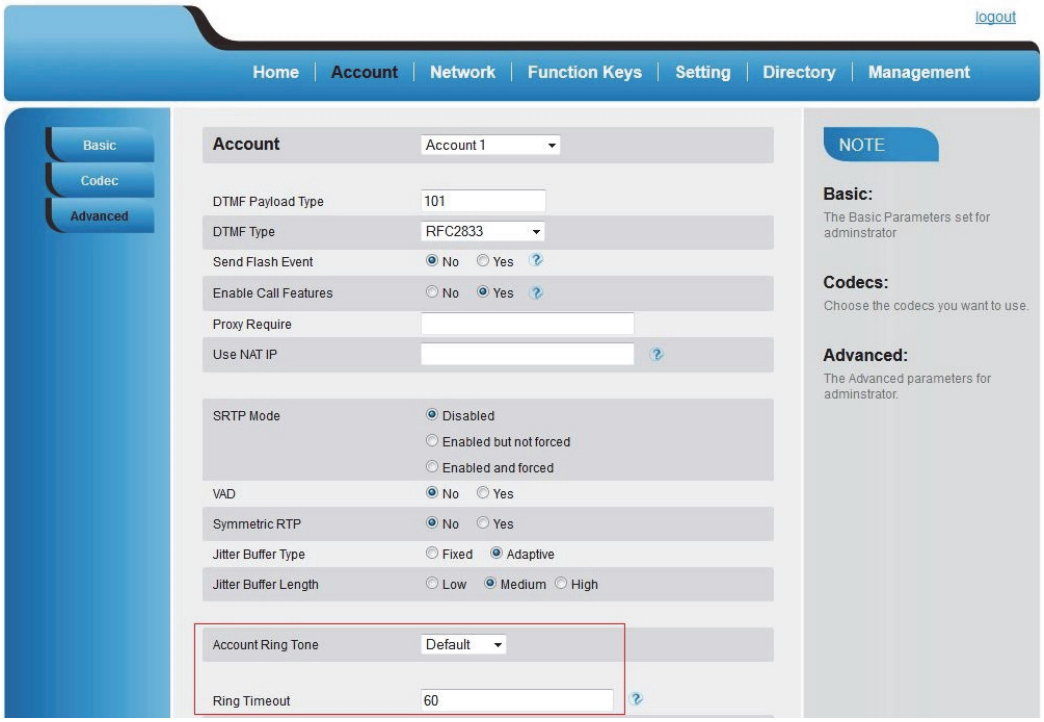

To configure Distinctive Ring Tone via Phone Interface

1. Press Directory
2. Select the target contact
3. Press Detail soft key to edit the contact.
4. Press and to select the wanted Ring Tone for the contact
5. Press Save soft key to save the contact.

Volume

You can adjust the volume for the phone by the volume keys: and .

To adjust the Ring tone volume

1. Option 1: To press and on the idle page

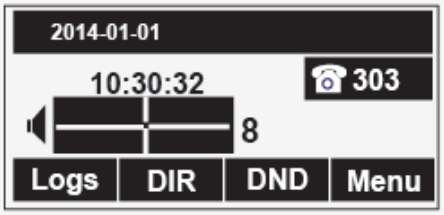

2. Option 2: To press and during the call is ringing.

To adjust the handset volume

To press and during a call in handset mode.

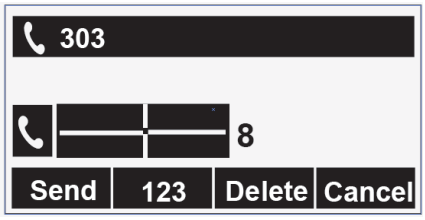

To adjust the headset volume

To press and during a call in headset mode.

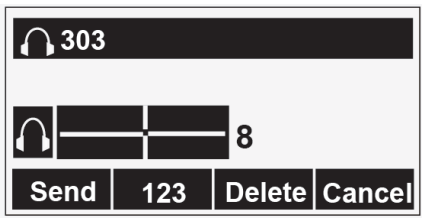

To adjust the speaker Volume

To press and during a call in speaker mode.

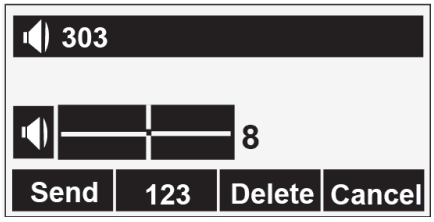

Directory

In the directory, you can add or delete your friends, business partner or anyone others' phone No. so you will not forget their number. Or put some anonymous phone No. in the blacklist to prevent from being disturbed.

A. To add contacts list into local directory

To add contacts manually

1. Press Menu → DIR
2. Press Add soft key

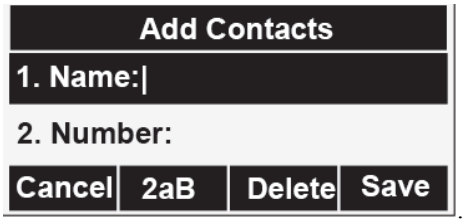

3. Enter the necessary information as Name, Phone number…
4. Press save soft key or to add the contacts successfully.

To add contacts from Logs

1. Press History soft key or press Menu → Logs → Local history
2. Press and to select the targeted one. (Press and switched among the All

calls, Dialed calls, Received calls, Missed Calls and Forward Calls).

3. Press Option soft key → Add to Contacts
4. Edit the necessary information as Name, Phone number…
5. Press save soft key or to add the contacts successfully.

To add contacts via web interface

1. Click Directory
2. Enter the name, number and some other information.
3. Press and then press  button.

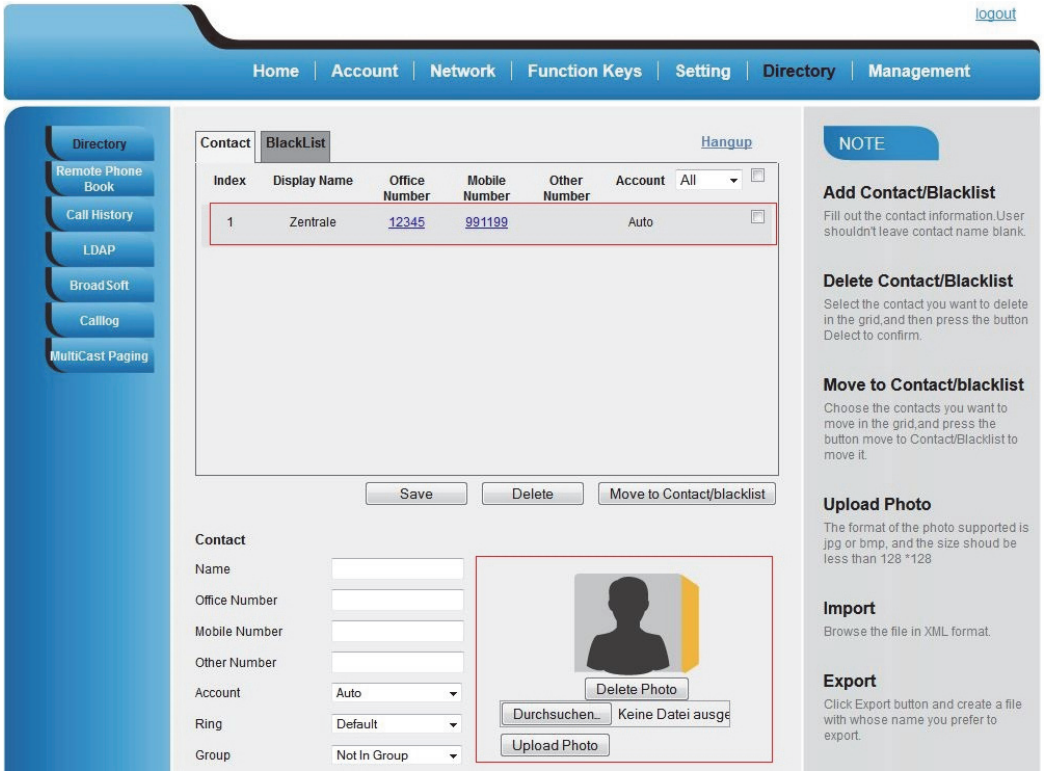

B: To add contacts into blacklist

To add blacklist manually

1. Press Menu → Directory → Blacklist
2. Press Add soft key.
3. Enter the necessary information as Name, Phone number…
4. Press save soft key or to add the contacts successfully.

To add blacklist from history

1. Press History soft key or press Menu → History → Local history
2. Press and to select the targeted one.
3. Press Option soft key → Add to Blacklist
4. Edit the necessary information as Name, Phone number…
5. Press save soft key or to add successfully.

Basic Call Features

Place a Call

There are three ways to dialing a call: Handset, Headset and Hands-free speakerphone.

To place a call by Handset

1. Pick up the handset, or press a line key and dial the necessary number.
2. Press or press the send softkey, then the call is sending.

To place a call by Headset:

1. Press the (light is Green),
2. Enter the desired number.
3. Press or press the Send softkey, then the call is sending.

Placing a call by hands-free speakerphone

1. Press the , or press the Line key, then you can hear the dial tone.
2. Press the number.
3. Press or press the Send soft key, then the call is sending.

To place a call by call history or Directory

1. Press the History soft key (On the idle page) or Menu → History /Directory
2. Press and to select the targeted one.
3. Press Send soft key to make the call.

Note:

The **key is set to be a send key. You can set the * key as send key or set some other to be as send keys. For more information, refer to the Key as Send on page**

During the call, you can also change among Headset**,** Handset **or** Free-speaker mode**.**

End a Call

Here shows to end a call during three mode:

To end a call by Handset

Press the Cancel soft key or hang up the handset.

To end a call under Headset Mode

Press the Cancel soft key or press .

To end a call under hands-free speakerphone Mode

Press the Cancel soft key or press .

Note:

During the conference, to end the call is same as mentioned above.

Receive a Call

There are three ways to receive a call when the phone is ringing:

To receive a call by handset

Pick up the handset the conversation is built.

To receive a call by headset

Press and now the conversation is built.

To receive a call by hands-free speaker

1. Option 1: Press directly.
2. Option 2: Press Answer soft key.
3. Option 3: Press the Line key (flashes red).

Moreover, some other action can be done by soft key when the call is coming.

1. To press the Reject soft key to reject the call. Or press to reject the current call.
2. To press Forward to forward to another phone.
3. To press Silence soft key, and then the call will keep silent, no ring tone display.

Auto Answer

Enable auto answer feature, you will answer all incoming call automatically.

To enable Auto Answer via Webpage

1. To Click Account → Advanced
2. To choose Yes for the Auto Answer.
3. To click Saveset to save the configuration.

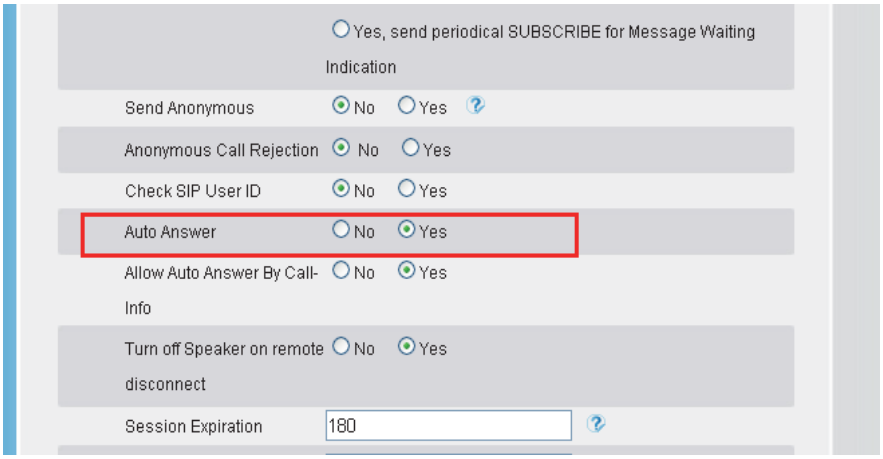
Yes, send periodical SUBSCRIBE for Message Waiting Indication
Send Anonymous No Yes
Anonymous Call Rejection No Yes
Check SIP User ID No Yes
Auto Answer No Yes
Allow Auto Answer By Call-Info No Yes
Turn off Speaker on remote disconnect No Yes
Session Expiration 180

To Disable Auto Answer via Webpage

1. To Click Account → Advanced
2. To choose No for the Auto Answer.
3. To click Saveset to save the configuration.

Call Hold

When use hold feature, the Hold icon will show on the display.

To make a call on hold during three modes:

To hold a call under handset mode:

1. Press Hold soft key to hold the current call.

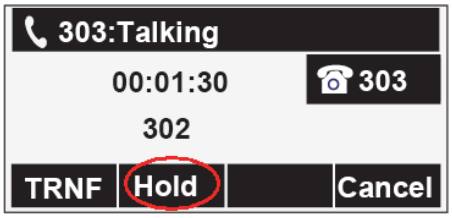

2. Press Resume soft key to resume the call on hold.

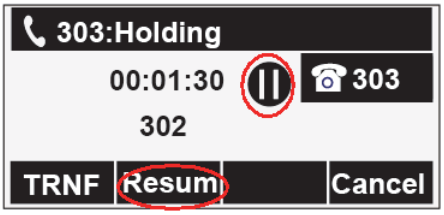

To hold a call under headset mode:

1. Press Hold soft key to hold the current call.
2. Press Resume soft key to resume the call on hold.

To hold a call during the speaker mode:

1. Press Hold soft key to hold the current call.
2. Press Resume soft key to resume the call on hold.

Call Transfer

This phone supports blind, attended and Semi-Attended Transfer.

Blind Transfer

When you use this feature, you can transfer

1. Press Transfer soft key during the conversation, the call is on hold now.

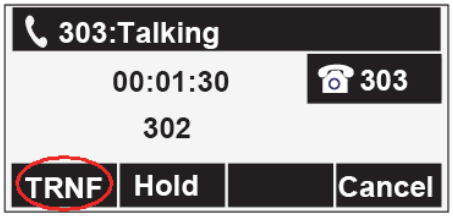

2. Enter the number that transfers to.

3. Press Transfer soft key , and now the blind transfer completed.

NOTE:

The "Enable Call Feature" must be configured to "Yes" to enable this feature.

Attended Transfer

When you use this feature, you can

1. Press transfer soft key during the conversation, the call is on hold now.
2. Enter the number that transfer to, and press the send soft key or .
3. Start the second conversation, press the transfer soft key, then, transfer completed.

NOTE:

To transfer calls across SIP domains, SIP service providers must support transfer across SIP domains. Blind transfer will usually use the primary account SIP profile. To use this function, should at least one line key set as Auto.

Semi-Attended Transfer

1. Press the transfer soft key during the conversation, the call is on hold now.
2. Enter the number transfer to, and then press [#], then you can here the ring tone.
3. Press the Transfer soft key, and now the Semi-attended transfer completed.

NOTE: To use this function, should at least one line key set as Auto.

BLF Transfer

1. Set a Programmable Key or line key is set as BLF. For how to set BLF, please refer to BLF
2. Press the transfer soft key during the conversation, the call is on hold now.
3. Press BLF key then realize blind, attended and Semi-Attended Transfer. (Webpage--Setting--Features)

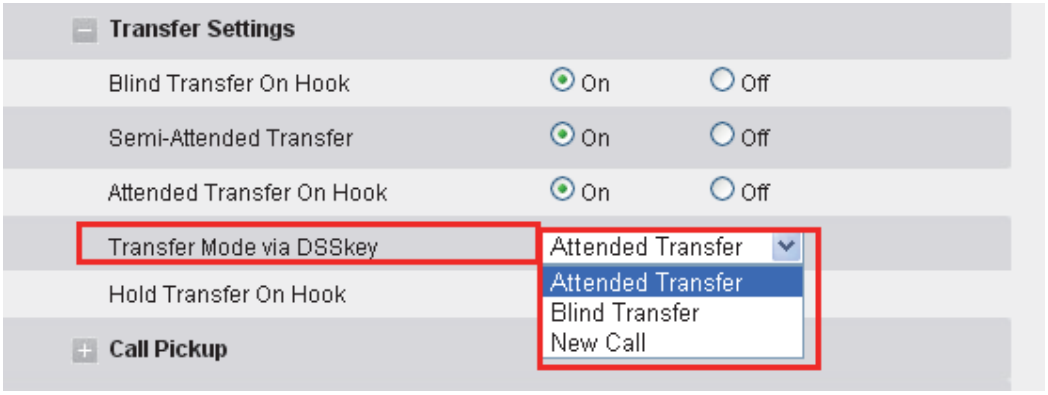

Call Conference

This IP Phone supports up to 5-way conference.

5-way conference

1. Assuming that call party A and B are in conversation. A wants to bring C, D and E in a conference
2. A press line 2 key, the call is placed on hold.
3. A enter the number of C and then press send soft key or #.
4. C answering the call.
5. A press conference soft key, then A, B and C are now in a conference.(and now this is **3-way conference**)

6. A press line 3 key, the current 3-way conference is placed on hold.
7. A enter the number of D and then press send soft key or #.
8. D answering the call.
9. A press the conference soft key, then A, B, C and D are now in a conference.(and now this is **4-way conference**)
10. A press line 4 key, the call is placed on hold.
11. A enter the number of E and then press send soft key or #.
12. E answering the call.
13. A press the conference soft key, then A, B, C, D and E are now the **5-way conference** is built.
14. A end the call, the conference is finished.

Note:

If C does not answer the call, A can back to continue the conversation with B;

Once A hangs up the call, the conference is ended, while if B or C drops the call, A&C or A&B conversation continues.

The conference feature is not available on all servers. For more information, contact your system administrator.

To realize the 5 way conference, the line should be all available.

Call Forward

This phone supports static forward (always forward, busy forward and no answer forward) and dynamic forward

To configure static forward

To configure always forward

With this feature, all incoming calls will forward immediately to configured number.

1. Press Menu → Features → Call forward →Always Forward.
2. Press and or press info soft key to select the enable choice

3. Enter the forward to number and on code (optional), off code (optional).
4. Press or Save soft key to save the configuration.

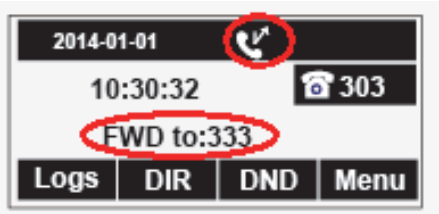

To configure busy forward

With this feature, the incoming calls are immediately forwarded if the phone is busy.

1. Press Menu →Features → Call forward →Busy forward.
2. Press and or press info soft key to select the enable choice.
3. Enter the forward to number and on code (optional), off code (optional).
4. Press or Save soft key to save the configuration.

To configure no answer forward

No Answer Forward: Incoming calls are forwarded if not answered after some time.

1. Press Menu →Features → Call forward →No answer forward.
2. Press and or press info soft key to select the enable choice
3. Enter the forward to number and on code (optional), off code (optional).
4. Press or Save soft key to save the configuration.
5. When the Forward feature is enabled, the Forward Icon will display on Top of the LCD.

To configure Forward via Web Interface

1. Setting → Features
2. Click On for the Always/Busy/No Answer
3. Fill the Forward to Number
4. (Optional) fill the on/off code
5. Click SaveSet to save the configuration

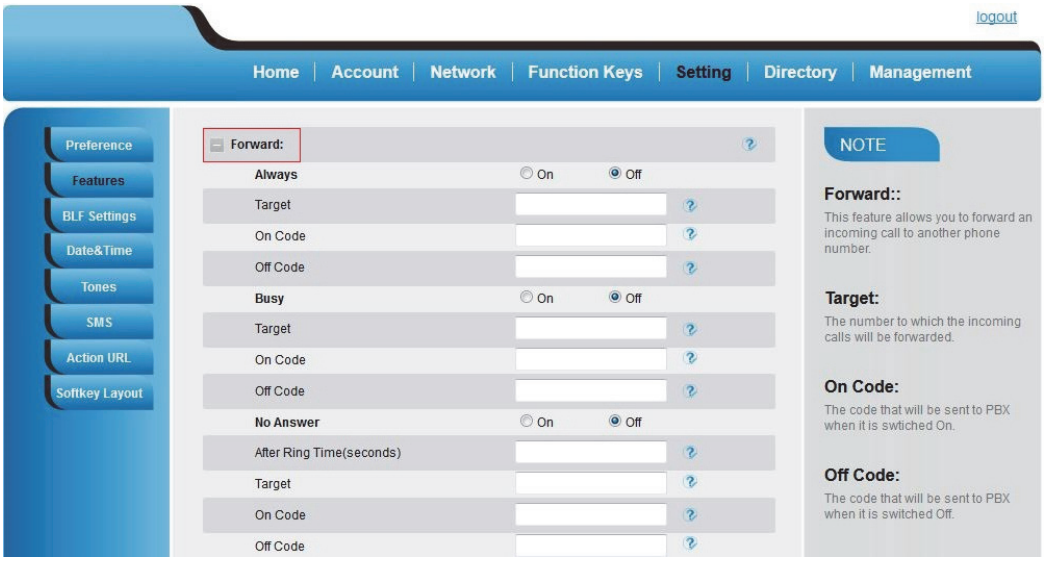

To cancel the forward feature via Phone Interface

1. Press Menu →Features → Call forward→Always/Busy/No answer Forward
2. Press and or press info soft key to select the disable choice
3. Press or Save soft key to save the configuration.

To cancel the forward feature via Web Interface

1. Setting → Features
2. Click Off for the Always/Busy/No Answer
3. Click SaveSet to save the configuration

To configure dynamic forward

Forward an incoming call during the ringing.

1. When the phone is ringing, press Forward soft key.

2. Enter the forward number.
3. Press # or press the send soft key, then the call is forwarded.

Note:

If the Programmable Key or line key is set as BLF, when an incoming call ringing, press this BLF key directly to realize the dynamic forward.

Call Return

This feature allows you to dial the last phone call you received.

To configure the Call Return via phone interface

1. Press Menu →Features →Function Keys→Line or Memory keys as Function Keys → Memory key1(for example)
2. Select the wanted Line or Memory key.
3. Press > and < or press info soft key to select the Key Event in the type field.
4. Press > and < or press info soft key to select the Call Return.
5. Press ✓ or Save soft key to save the configuration

To configure the Call Return via Web interface

1. Click Function keys → Line or Memory key.
2. Select the desired Line or Memory key and select Call Return in the Type.
3. Click the SaveSet to save the configuration.

Anonymous Call

Just enable the anonymous call feature, you can set your ID do not appear on the other phone that you called.

To configure anonymous call

1. Press Menu →Features →Anonymous Call
2. Press and or press info soft key to change the Line ID
3. Press and or press info soft key to select the enable choice in Anonymous Call filed.
4. Enter the call on code (optional), call off code (optional).
5. Press or Save soft key to save the configuration.

To cancel anonymous call feature

1. Press Menu →Features →Anonymous Call
2. Press and or press info soft key to select the disable choice in Anonymous Call filed.
3. Press or Save soft key to save the configuration.

Reject Anonymous

If you do not want to be disturb by anonymous calls, you can set the reject anonymous call features, so you will not hear the unknown calls

To configure rejecting anonymous call

1. Press Menu →Features →Anonymous Call
2. Press and or press info soft key to change the Line ID

3. Press and or press info soft key to select the enable choice in Rejection filed.

4. Press or Save soft key to save the configuration

To cancel rejecting anonymous call

1. Press Menu →Features →Anonymous Call

2. Press and or press info soft key to select the disable choice in Rejection filed.

3. Press or Save soft key to save the configuration.

Call Mute

When you use the Mute feature, the other parties will not hear your voice while you can hear their voice. Call mute applies to all modes (handset, headset, and speakerphone).

To mute the call during a call (including a conference call)

1. Press the mute key , then the mute key glows green, and the LCD display Mute Icon.

2. To disable the mute function, press again.

DND

When you use the DND feature, the phone is to reject all incoming calls automatically and you can see the DND icon shown on the Top of the LCD on idle page.

To enable DND feature

Press the DND soft key when the phone is idle, and then DND icon shown on the LCD.

To disable DND feature

Press the DND soft key again, and then there is no DND icon on the LCD.

Key as Send

To configure Key as Send

1. Press Menu →Features → Key as Send
2. Press and or press info/switch soft key to select the enable choice.
3. Press or Save soft key to save the configuration

To cancel # Key as Send

1. Press Menu →Features → Key as Send
2. Press and or press info/switch soft key to select the disable choice.
3. Press or Save soft key to save the configuration.

No Key Entry Timeout

No Key Entry Timeout means that when you entry the number, it will dial out automatically after some time when you stop enter the number.

To configure No Key Entry Timeout

1. Click Webpage Setting → Preference
2. Fill the blank of No Key Entry Timeout: for example 5(seconds).(0 means never timeout, you should press the send key the dial out the number.
3. Click the SaveSet to save the configuration.

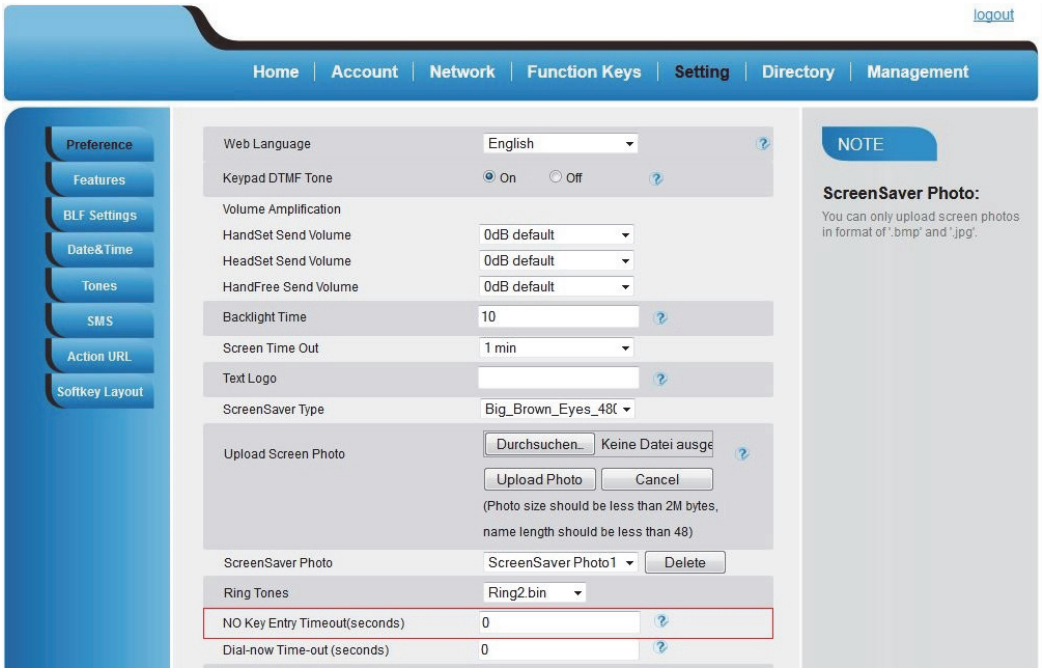

Keypad Lock

To enable Keypad Lock via Phone

1. Press Menu--Settings--Advanced Setting--Phone Setting--Lock
2. Press Info or Switch to change choose lock type: All Keys Menu Key Function Key Lock & Answer

3. Press Save or OK key to save the configuration.

To disable Keypad Lock via Phone

1. Press Menu--Settings--Advanced Setting--Phone Setting--Lock
2. Press Info or Switch to change choose Off.
3. Press Save or OK key to save the configuration.

To enable Keypad Lock via Webpage

1. Click Webpage Setting → Preference
2. To choose the Lock keys.
3. To fill the unlock PIN and auto lock time
4. Fill the Emergence Number, when the phone is Lock, only Emergency Number can be sent.
5. To click Saveset to save the configuration.

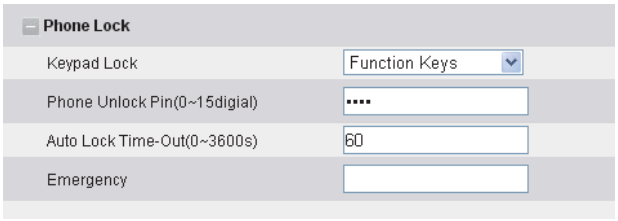

To Disable Keypad Lock via Webpage

1. Click Webpage Setting → Preference
2. To choose Disable for the Phone Lock.
3. To click Saveset to save the configuration.

Hot Line

To configure Hot Line

1. Press Menu →Features → Hot Line
2. Enter the Number and delay time (as present, we support off hook auto dial).
3. Press or Save soft key to save the configuration

To configure Hotline auto dial via Web Interface

1. Setting → Features.
2. Fill the number in the Hotline Number and Hotline Time-out.
3. Click SaveSet to save the configuration.

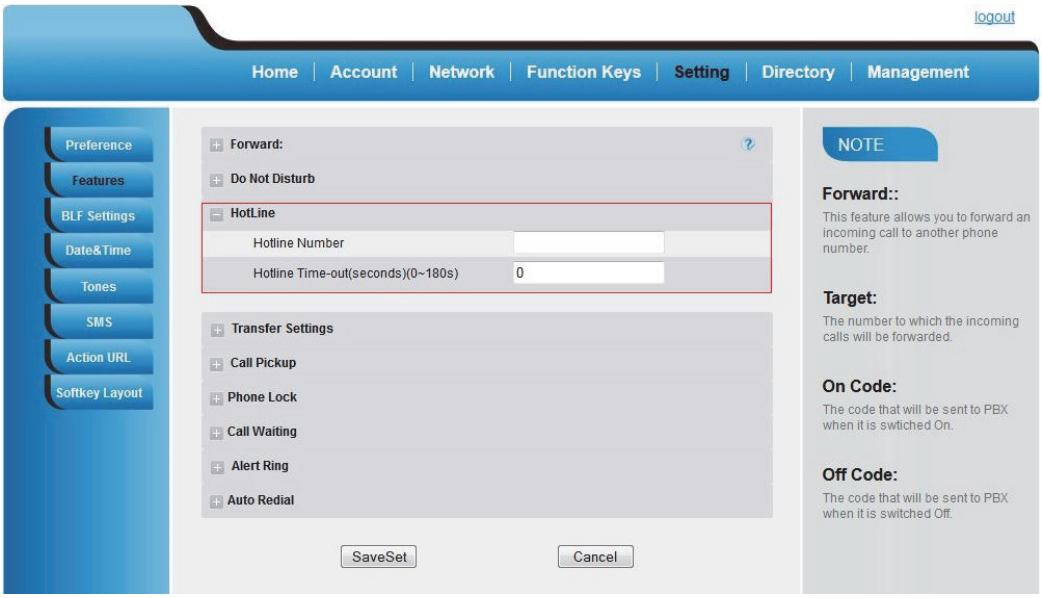

Delete the number and save the configuration, and then now the Hotline auto dial is cancelled.

Advanced Features

Voice Message

This phone supports Voicemail, and when there is message, the message will will light green. Moreover, when pick up the handset, or press speaker key, you will hear some quick busy tone.

To configure the Voice mail feature

1. Press Menu→Messages→Voice Mail→Set Voice Mail.
2. Enter the Account1/2/3/4 NO.
3. Press or Save soft key to save the configuration

Note：

This feature is not available on all servers. For more information, contact your system administrator.

Intercom

When use the intercom feature, you can quickly get access connect to the configured one.

To configure intercom feature via phone interface

1. Press Menu →Features →Function Keys→Line or Memory keys as Function Keys → Memory key1(for example)
2. Press and or press info soft key to select the intercom in the type field.
3. Enter the targeted Number.
4. Press or Save soft key to save the configuration

Then the selected Line or Memory key will work as intercom.

To configure Intercom feature via Web Interface

1. Click Function keys → Line or Memory key.
2. Select the wanted Line or Memory key.
3. Enter the desired phone number in the Value field.
4. Select the Account ID
5. Click the SaveSet to save the configuration.

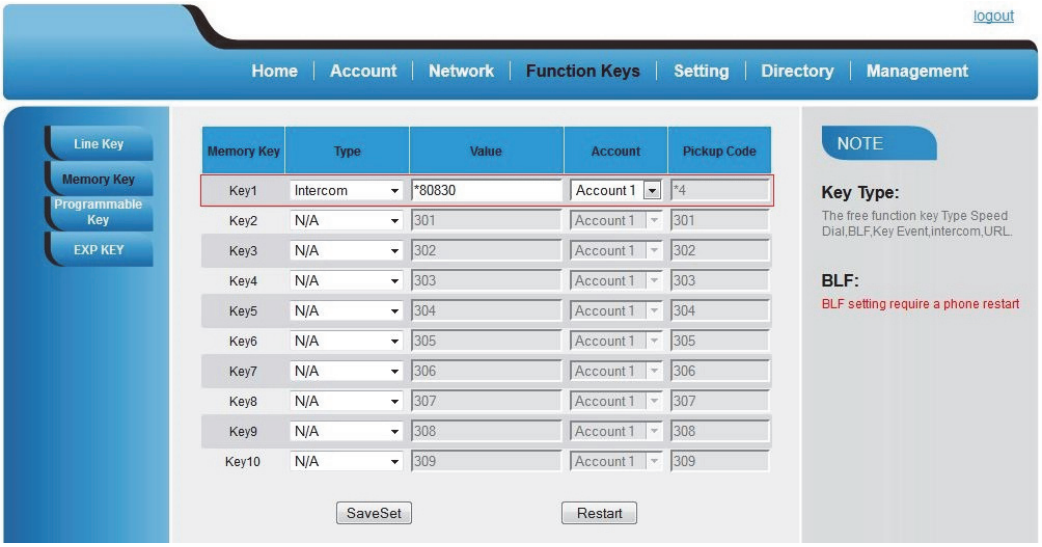

Note：

This feature is not available on all servers. For more information, contact your system administrator.

Speed Dial

With this feature, you can dial one directory by press the definite key.

To configure Speed Dial feature via phone interface

1. Press Menu →Features →Function Keys→Line or Memory keys as Function Keys → Memory key1(for example)

2. Press and or press info soft key to select the Speed Dial in the type field.
3. Enter the targeted Number.
4. Press or Save soft key to save the configuration

Then the selected Line or Memory key will work as Speed Dial.

To configure Speed Dial feature via Web Interface

1. Click Function keys → Line or Memory key.
2. Select the wanted Line or Memory key and set as Speed Dial.
3. Enter the desired phone number in the Value field.
4. Select the Account ID
5. Click the

to save the configuration.

Direct Pickup

With this feature, you can pick up the set line when it ringing.

To configure Direct Pickup feature via phone interface

1. Press Menu →Features →Function Keys→Line or Memory keys as Function Keys → Memory key1(for example)
2. Press and or press key to select the Speed Dial in the type field.
3. Enter the value.
4. Press or Save soft key to save the configuration

Then the selected Line or Memory key will work as Direct Pickup.

To configure Direct Pickup feature via Web Interface

1. Click Function keys → Line or Memory key.
2. Select the wanted Line or Memory key and set as Direct Pickup.

3. Enter the pickup code and followed the desired phone number in the Value field.
4. Select the Account ID
5. Click the SaveSet to save the configuration.

Group Pickup

With this feature, you can pick up the specified group that you want incoming calls.

To configure the Pick up via phone interface

1. Press Menu →Features →Function Keys→Line or Memory keys as Function Keys → Memory key1(for example)
2. Select the wanted Line or Memory key.
3. Press and or press info soft key to select the Group Pickup in the type field.
4. Enter pickup code and followed the desired group number
5. Press or Save soft key to save the configuration

To configure the Group Pick up via Web interface

1. Click Function keys → Line or Memory key.
2. Select the desired Line or Memory key and select Group Pickup in the Type.
3. Enter the pickup code and followed the desired Group number in the Value field.
4. Click the SaveSet to save the configuration.

BLF

You can use the BLF (Busy Lamp Field) feature to monitor a specific one whether his phone is busy or free.

1. When the monitored line is idle, the light is steady green.
2. When the monitored line is ringing, the light is blinking red, press the BLF key to pick the phone up directly.

3. When the monitored line is calling or in a conversation, the light is steady red.

To configure a BLF key by phone

1. Press Menu →Features →Function Keys→Line or Memory keys as Function Keys → Memory key1(for example).
2. Select the targeted Line or Memory key.
3. Press and or press infos soft key to select the BLF in the type field.
4. Enter the targeted Value Number.
5. Press and or press info soft key to select the Account ID.
6. Enter the Pickup Code.
7. Press or Save soft key to save the configuration

To configure a BLF key by web

1. Click Function keys → Line or Memory key.
2. Select the desired Line or Memory key and select BLF in the Type.
3. Enter the monitored phone number in the Value field.
4. Select the Account ID
5. Filled the Pickup code.
6. Click the

to save the configuration and then restart.

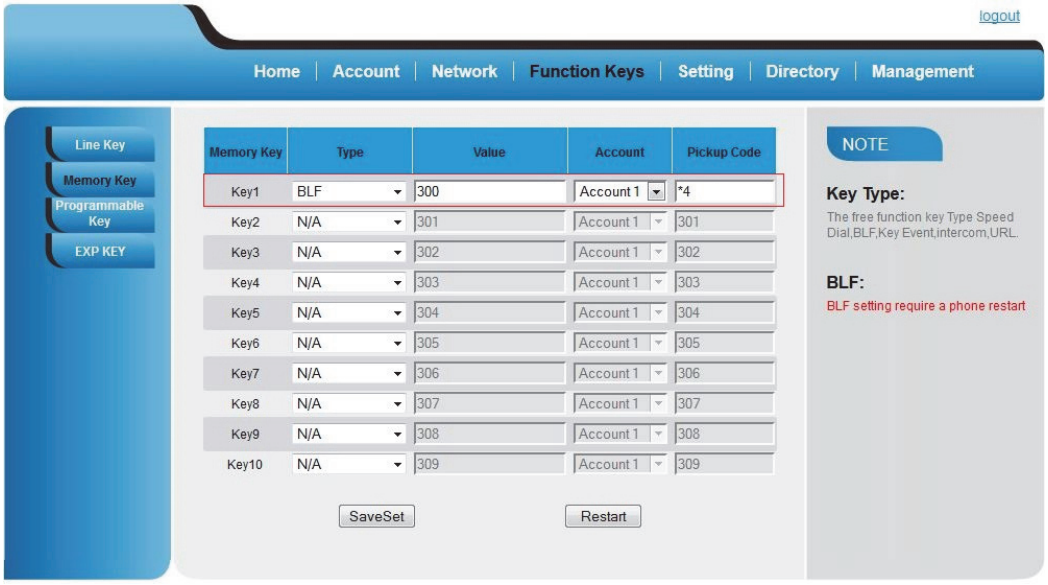

Note:

This feature is not available on all servers. For more information, contact your system administrator.

Shared Line

This feature allows subscribers to share SIP lines. Moreover it also provides status monitoring of the shared line.

To configure the line key as shared line via phone interface

1. Press Menu →Features →Function Keys→Line or Memory keys as Function Keys → Memory key1(for example)
2. Select the wanted Line or Memory key.
3. Press and or press info soft key to select the Shared Line in the type field.
4. Press and or press info soft key to select the Account ID.
5. Enter the Label
6. Enter the Value
7. Press or Save soft key to save the configuration

To configure the line key as shared line via Web Interface

1. Click Function keys → Line or Memory key.
2. Select the desired Line or Memory key and select Shared Line in the Type.
3. Enter the Value.
4. Enter the Label.
5. Select the Account ID
6. Click the SaveSet to save the configuration and then restart.

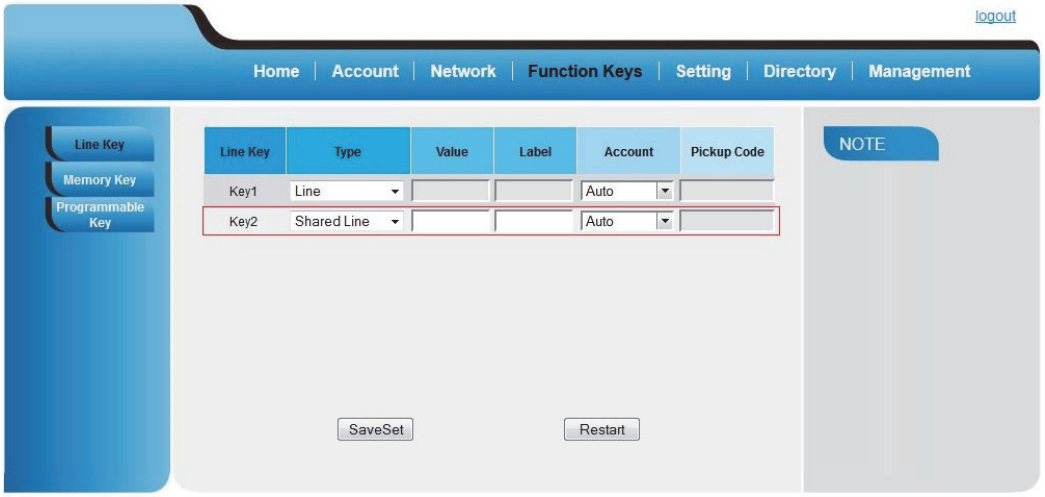

Note:

This feature is not available on all servers. For more information, contact your system administrator.

Record

With record feature, you can record calls by pressing a record key on the phone.

To configure the record via phone interface

1. Press Menu →Features →Function Keys→Line or Memory keys as Function Keys → Memory key1(for example)

2. Select the wanted Line or Memory key.
3. Press and or press info soft key to select the Key Event in the type field.
4. Press and or press info soft key to select the Record.
5. Press or Save soft key to save the configuration

To configure the record via Web Interface

1. Click Function keys → Line or Memory key.
2. Select the desired Line or Memory key and select Record in the Type.
3. Click the to save the configuration.

Note:

Please contact the system administrator whether support this feature or not.

Call Park

With this feature, you can put a call on hold and continue the conversation from another phone.

To configure the Call Park via phone interface

1. Press Menu →Features →Function Keys→Line or Memory keys as Function Keys → Memory key1(for example)
2. Select the wanted Line or Memory key.
3. Press and or press Switch soft key to select the Key Event in the type field.
4. Press and or press Switch soft key to select the Call Park.
5. Press or Save soft key to save the configuration

To configure the Call Park via Web interface

1. Click Function key → Line or Memory key.
2. Select the desired Line or Memory key and select Direct Pickup in the Type.
3. Click the SaveSet to save the configuration.

Paging

With this feature, you can call a phone directly.

To configure the paging via phone interface

1. Press Menu →Features →Function Keys→Line or Memory keys as Function Keys → Memory key1(for example)
2. Select the wanted Line or Memory key.
3. Press and or press info soft key to select the Key Event in the type field.
4. Press and or press info soft key to select the Paging.
5. Press or Save soft key to save the configuration

To configure the Paging via Web interface

1. Click Function keys → Line or Memory key.
2. Select the desired Line or Memory key and select Paging in the Type.
3. Click the SaveSet to save the configuration.

DTMF

To configure the DTMF via Phone Interface

1. Press Menu →Features →Function Keys→Line or Memory keys as Function Keys → Memory key1(for example)
2. Select the wanted Line or Memory key.
3. Press and or press info soft key to select the DTMF in the type field.

4. Enter the value
5. Press or Save soft key to save the configuration

To configure the DTMF via Web interface

1. Click Function keys → Line or Memory key.
2. Select the desired Line or Memory key and select DTMF in the Type.
3. Fill the value.
4. Click the

to save the configuration.

Prefix

To configure the Prefix via Phone Interface

1. Press Menu →Features →Function Keys→Line or Memory keys as Function Keys → Memory key1(for example)
2. Select the wanted Line or Memory key.
3. Press and or press info soft key to select the Prefix in the type field.
4. Enter the value
5. Press or Save soft key to save the configuration

To configure the Prefix via Web interface

1. Click Function key → Line or Memory key.
2. Select the desired Line or Memory key and select Prefix in the Type.
3. Fill the value.
4. Click the

to save the configuration.

Then when you press this key, the set value is input directly.

Factory Reset

To set Factory Reset by phone interface

1. Press Menu → Setting → Advanced Setting (default password: admin) → Factory Reset
2. Press OK soft key in the warning page.

To set Factory Reset via web interface

1. Click Management → Upgrade
2. Click Reset To Factory and then confirm the setting.

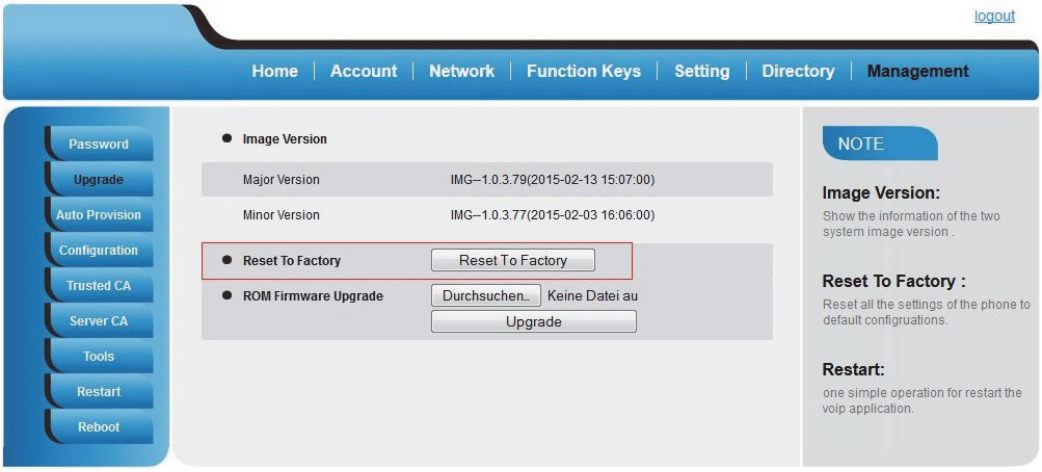

Appendix

Warranty

Your point of contact for warranty obligation benefits is the specialist retailer where you acquired your device. Warranty conditions are based upon the legal regulations of the country in which the device was purchased. Your specialist retailer will be glad to provide more information.

Guarantee

Tiptel provides a voluntary guarantee on the device, the conditions of which are published on http://www.tiptel.com. The guarantee conditions applicable at the time of purchase apply. The original sales slip (receipt, bill) with serial number and/or IMEI number is used as proof of purchase. Please keep these documents in a safe place.

Declaration of conformity

This device satisfies the requirements of the EU directive on radio and telecommunication terminal equipment and the mutual recognition of their conformity. The CE mark on the device confirms conformity with the above directive.

We hereby declare that the device satisfies all fundamental requirements of European directives.

For details on the declaration of conformity please visit http://www.tiptel.com.

Disposal

Packaging: Dispose of card and cardboard boxes in the used paper container and throw plastic parts into a recycling container.

Device disposal: Used electrical devices should not be disposed of in the household waste. Dispose of the device at your local collection points (scrap or recycling yards). Please contact your local authority for information on disposal sites.

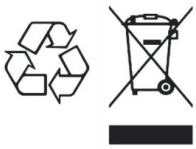

Tiptel.com GmbH
Business Solutions
Halskestraße 1
40880 Ratingen
Deutschland
Tel.: 0900 100–84 78 35*
Vanity Tel.: 0900 100–TIPTEL*
Internet: www.tiptel.de
E-Mail: info@tiptel.com
International: www.tiptel.com

*(1,49 Euro/Min. aus dem Festnetz der Deutschen Telekom, abweichende Mobilfunkpreise möglich)

Tiptel GmbH
Ricoweg 30/B1
2351 Wiener Neudorf
Österreich
Tel.: 02236 677 464-0
Fax: 02236 677 464-22
E-Mail: office@tiptel.at
Internet: www.tiptel.at

Tiptel AG
Bahnstrasse 46
8105 Regensdorf
Schweiz/Suisse/Svizzera
Tel.: 044 843 13 13
Fax: 044 843 13 23
E-Mail: tiptel@tiptel-online.ch
Internet: www.tiptel-online.ch

Tiptel B.V.
Camerastraat 2
1322 BC Almere
Nederlands
Telefoon: 036 53 666 50
Fax: 036 53 678 81
e-mail: info@tiptel.nl
Internet: www.tiptel.nl

Tiptel NV/SA
Imperiastraat 10 B8
1930 Zaventem
Belgique/België
Tel.: 02 714 93 33
Fax: 02 714 93 34
E-Mail: tech@tiptel.be
Internet: www.tiptel.be

Tiptel s.a.r.l.
23, avenue René Duguay-Trouin
78960 Voisins-le-Bretonneux
France
Tél.: 01 39 44 63 30
Fax: 01 30 57 00 29
e-mail: support@tiptel.fr
Internet: www.tiptel.fr

CE

(en) 03/2015